Petenet[®]

Quick Start Guide



4-Port Gigabit PoE+ Switch
1 Gigabit RJ45 & 1 SFP Upink Ports

1 Features

 The switch supports one-key function conversion, currenetly supports five modes, DEFAULT mode, VLAN mode, EXTEND mode, WATCHDOG mode, QOS mode.

DEFAULT: Normal mode, no special function (Normal mode all switch down). **VLAN:** Ports 1-4 do not communicate with each other; they communicate only with uplink ports. This controls broadcast storm and strengthens security. **Extend:** Ports 1-4 communicate with each other and with uplink ports. Ports 1-4 can transmit up to 250m Cat5e/6 rated cable or higher.

PoE Watchdog: If a linked network port receives no data for 2-3 minutes, PoE Watchdog cuts and restores power to that port, causing the linked device, such as an IP camera, to restart.

QOS: QOS is the specified port with port data priority, priority is higher than other ports, other ports data priority is equal. 1-2 ports specify the priority, then the data forwarding of these two ports has a higher priority than the other ports, so the data of these two ports are preferentially forwarded.


- Conforms to IEEE802.3, IEEE 802.3i, IEEE802.3u, IEEE802.3ab, IEEE802.3z, IEEE802.3af/at
- Provides 5 10/100/1000Base-T ports and 1 Gigabit SFP
- Provides 4 PoE+ injectors ports and 60W Built-in power supply
- High backplane bandwidth 12 Gbps
- IEEE802.3x Flow control
- 6KV Surge Protection



Notice: The transmission distance is related to the connected cable. Standard Cat5e/6 network cable and the quality of camera will help maximize the furthest distance possible.

Product Introduction

The 4-Port Gigabit PoE+ Switch is fully integrated to support security monitoring, providing high-performance packet forwarding and Gigabit Ethernet transfer rates. Adaptive ports automatically adjust bandwidth to ensure clear images and smooth transmission for any application, including high-definition video recording or streaming. The AI DIP switch enables PoE Watchdog, QOS, Extend, and VLAN modes to further enhance performance and security.

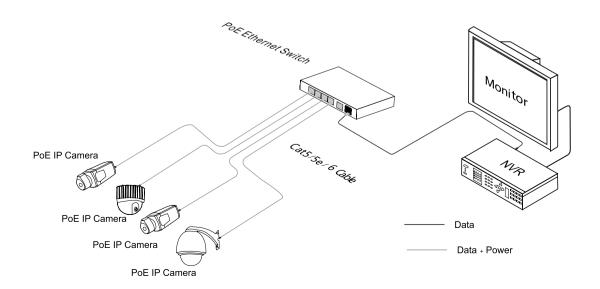

Specifications

	Item		Description
	Power supply		Built-in power supply
Power	Voltage Range		100~240VAC
	PoE Budget		60W for PoE
Ethernet	Speed		Ports 1 to 5: 10/100/1000 Mbps Port 6: Gigabit SFP
	Transmission Distance		RJ45: 328 ft. (100 Meters) SFP Port: Transmission distances vary with type of SFP module used.
Network Switch	Ethernet Standard		IEEE 802.3 / 802.3 i / 802.3 u / 802.3 ab / 802.3 z / 802.3 af / 802.3 at
	Switching capacity		12G
	Transfer Rate		14,880pps for 10Mbps
			148,800pps for 100Mbps
			1,488,000pps for 1000Mbps
	MAC Address		2K MAC address table
LINK /ACT	On	Green	The port is connected
	Blinks	-	The port is receiving or transmitting data
	Off	-	The port is not linked successfully with the device
POE	On	Orange	PD is connected
	Off	-	PD is connected or power forwarding fails
	PoE pin assignment		V+ (RJ45 Pin 1, 2), V- (RJ45 Pin 3, 6)
Enviro -nment	Working Temperature		0°C~40°C
	Storage Temperature		-40°C~70°C
	Humidity Non condesing		0~90%
	Port Sugre		6KV
Mecha -nical	Dimension		168 x 94 x 32mm
	Color		Black

Specifications are subject to change without prior notice.

Installation Steps

Please check the following items before installation, if it is missing, please contact the dealer.

- 4-Port Gigabit PoE+ Switch
- AC power cable
- User manual 1pcs

1pcs

1pcs


Please follow the below installation steps

- 1) Ensure that all devices are powered off before installation. NOTE: Installing with the power on will damage the equipment.
- 2) Use network cable to connect PoE IP cameras or other devices to Ports 1-4 of the PoE Switch.
- 3) Use network to connect equipment to the uplink port and NVR or computer.
- 4) Connect AC power;
- 5) Check if the installation is correct, the equipment is in good condition and the connection is stable; then provide power for system;
- 6) Ensure the PoE Switch has power and works properly.

5 Board Diagram

Instruments to be used: wire crimper, network tester and wire sequence of RJ45 plug should conform with EIA/TIA568A or 568B.

Front board

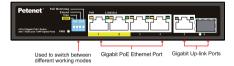

Back board



Troubleshooting


Please follow the steps if the equipment has trouble


- Make sure the equipment is installed according to the manufacture's installation quide.
- Confirm RJ45 cable order meets EIA/TIA568A or 568B standard.
- Each PoE port can provide maximum power of 30W. Do not connect equipment requiring over 30W.
- Replace the equipment with a proper functioning 4 port PoE Ethernet Switch to check if the equipment is damaged.
- Please contact your vendor if trouble still exists.
- Total PoE power between all 4 PoE Ports is limited to 60W.


Plug Producing Method

Instruments to be used: wire crimper, network tester and wire sequence of RJ45 plug should conform with EIA/TIA568A or 568B.

- 1) Remove 2cm long of the insulating layer and bare 8 pairs UTP cable
- 2) Separate the 8 pairs UTP cable and straighten them.
- 3) Line up the 8 pieces of cables per EIA TIA 568A or 568B.
- 4) Cut off the cables to leave 1.5cm bare wire.
- 5) Plug 8 cables into RJ45 plug make sure each cable is in each pin.
- 6) Use the wire crimper to crimp it.
- 7) Repeat above 6 steps to make the another ends.
- 8) Use network tester to test the cable if it works.

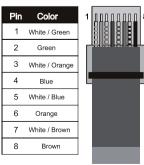

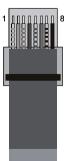

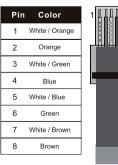

EIA/TIA568A

EIA/TIA568B



Choosing:

When choose RJ45 make sure if one end is EIA / TIA568A. the other end should also be EIA / TIA568A. When choose RJ45 make sure if one end is EIA / TA568B. the other end should also be choosing EIA / TIA568B.